

# OUTPUT SCREENS and CONFIRMATIONS

This Output Section includes the “Selection Screen”, “Confirmation of Performance” and “Dimensional Data” screens.

## PERFORMANCE SCREEN

Description	UoM	Performance
Model		CWC04H12-30x60R
Rows / FPI		4 / 12
Total Capacity	Btu/h	201,717
Sensible Capacity	Btu/h	139,395
Lvg Air DB / WB	°F	54.0 / 53.7
Face Velocity	SFPM	400.0
Lvg Fluid Temp	°F	54.6
Fluid Flow Rate	GPM	40.9
Air Press Drop	in wc	0.38
Fluid Press Drop	ft H2O	9.04
Coil Circuiting		Half
Connection Size		2.00"
Fluid Velocity	FPS	4.45
Dry Weight	Lb	178
Coil Price	USD	Contact Factory

## SELECTION SCREEN

When you have created your initial input for a particular coil, you need to create the output screen. Click the **PERFORMANCE** tab at the top of the Input Screen and you will receive the initial “Selection Screen”.

This selection screen needs to be reviewed to see if the initial selection or data meets specifications or other criteria. If it doesn't, remove the screen (top, right) and go back to the “Coil Input” screen. You can then change data to meet your needs. You can do this back and forth until the selection screen shows a selection/data that you want to save.

If you want to compare selections, then follow the “Confirmation of Performance” section below and go back to input which will have saved the data. You can then make your changes and new selection.

## CONFIRMATION of SELECTION

After you have a Selection Screen that meets your approval, click on the PRINT tab (upper, left) then click on "Performance". The print copy will be displayed on the screen. Click on the PRINT symbol (upper, middle) and print this copy. To Remove, just click on the upper, right "X"

## DIMENSIONAL DATA SCREEN

FH	FL	CH	CL	CD	HD	OAL	SL	I	S
30	60	33.00	63.00	7.50	5.13	67.38	3.50	2.75	1.80

  

O	R	F1	F2	F3	F4	RB	Drawing
2.75	1.80	1.50	1.50	1.50	1.50	2.25	WTRRHSTD

To obtain Dimensional Data, go up to Dimensions Screen (near upper, right) and the Dimensional Print Copy appears. Check it for validity, arrangement, etc.

After you have Dimensional Data that meets your approval, click on the PRINT tab (upper, left) and click on "Dimensions". The print copy will be displayed on the screen. Click on the PRINT symbol (upper, middle) and print this copy. To Remove, just click on the upper, right "X"

You can also print Pricing information by following the steps listed above, and clicking on "Pricing". There is an "All Reports" selection that will give you Performance, Dimensions and Pricing.